USER MANUAL

32" / 37" TFT-LCD Display Embedded Multi-Media Player

Version 08.1a

Before connecting, operating or adjusting this product, please read these instructions completely. Please keep this manual of future reference.

Product and brand names mentioned in this manual are trademarks of registered trademarks of their respective holders.

Specification is subject to change without notice.

Important Information

Please do not open or remove the cover plate because it may generate a high voltage shocking or other dangers.

Please do not precede the maintenance or repairing of this unit by yourself. Carefully read the instruction manual before use, and keep the manual for future reference.

Please read and comply with all warnings, cautions, and the manual thoroughly. You might lose your warranty if you modify or revise this item in such as manner not approved by this manual.

- AC cords enclosed in this product are for 110V or 220V.
- If any liquid or solid objects fall inside the cabinet, unplug the set immediately and have it checked by qualified service personnel before operating it again.
- Never add any attachments and/or equipments without approval of the manufacturer. Such additions can increase the risk of fire, electric shock, or other personal injury.

Important Warnings and Safety Precautions

- Read instructions- all the safety and operating instructions should be read before the product is operated.
- Keep the safety and operating instructions for future reference.
- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock. Never spill liquid of any kind on the product.
- Do not remove/insert the plug into the socket with wet hands in order to prevent electric shock.
- Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Do not attempt to service this product by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all services to qualified service personnel. The manufacturer will not be responsible for any injuries or damage caused to the product.
- AC cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay attention particularly to cords at plugs, convenience receptacles, and the points where they exit from the product.
- Unplug the unit from the wall outlet before cleaning. Use a damp cloth; do not use liquid or aerosol cleaners. Please refer to the cleaning instruction.
- Do not place the product on an unstable cart, stand, tripod, bracket, or table where it may fall. A falling unit can cause serious injury to a child or adult and serious damage to the appliance. Follow the manufacturer's instructions when mounting the unit, and use a mounting accessory recommended by the manufacturer.
- The unit is designed with slots in the cabinet for ventilation to protect it from overheating. Do not block these openings with any object, and do not place this unit on a bed, sofa, rug, or other similar surfaces. Do not place it near a radiator or heat register.
- The plug provided by this unit will fit into the power outlet in only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your outlet.
- Use wall or ceiling mounts when mounting the product on a wall or ceiling, be sure to install the product according to the method recommended by the manufacturer.
- For safety reasons, do not leave children along with the unit. DO NOT ALLOW CHILDREN TO CLIMB ON THE UNIT.

Contents

1. INTRODUCTION 1
   Product Description 1
   Product Features 1
   Package Contents 2
   Assembly and Connection 2
2. SYSTEM SETUP 4
   Remote Control function 4
3. ON SCREEN DISPLAY OPERATING INSTRUCTIONS 5
--- AD Board --- 5
   Main Screen 5
   Setup Screen 5
--- Multi-Media Player --- 8
   Main Screen 8
   Photo operate screen 9
   Music operate screen 9
   Video operate screen 10
   File operate screen 10
   Device operate screen 10
   Setup screen 11

1. INTRODUCTION

Product Description

Thank you for choosing the FP3722M / FP3222M TFT-LCD Display Embedded Multi-Media Player and for your continued support and use of our products.

This compact media player allows you to play back high quality HD image for JPEG files as well as video files by scaler for video up conversion to achieve 1080i.

Product Features

- 32" / 37" TFT-LCD Display support 16.7M Color.
- HD component output for 720p/1080i JPEG display.
- Scaler for video up-conversion to 720p/1080i.
- MPEG-4 simple profile video support.
- Support file format: Ware, AAC, MP3, WMA, BMP, TIFF, PNG, GIG JPEG, Progressive JPEG, Motion JPEG, MPEG-1, MPEG-2, MPEG-4.
- Built-in remote receiver, easy operation.
- Firmware can by upgraded by using flash memory card.
- Power-on play: automatically play.

Package Contents

Please check the package to make sure is contains the following items

Main body

Remote controller

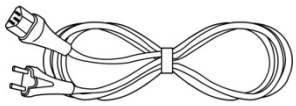

Power Cord

User Manual

Assembly and Connection

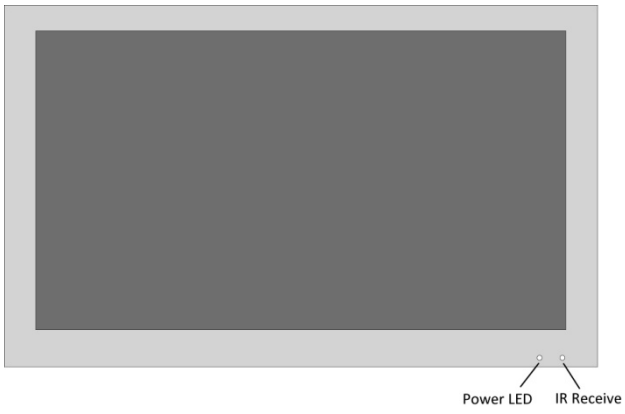

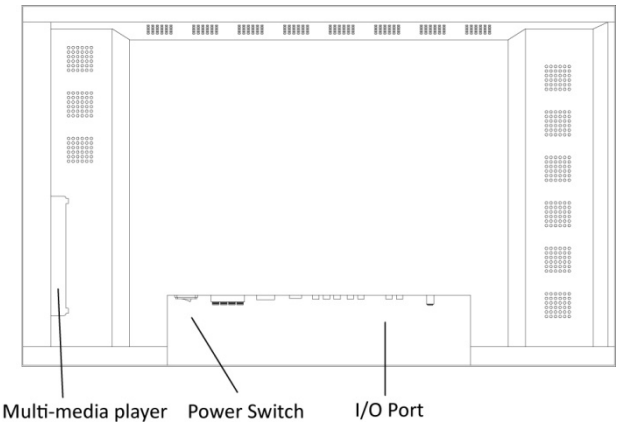

I/O Port for US. System

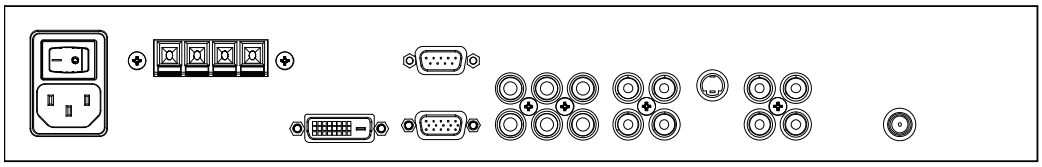

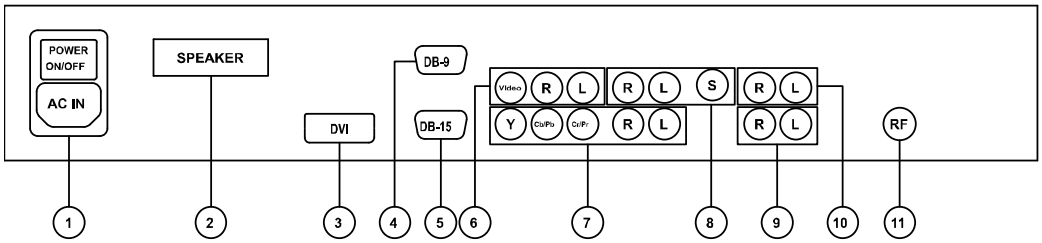

①. Main power switch & AC input socket
②. Speaker port
③. DVI input port
④. RS-232 connection port (option)
⑤. VGA input port
⑥. AV input port
⑦. YPbPr input port (for embedded multi-media player use)
⑧. S-Video input port
⑨. Audio output port
⑩. PC audio input port (with DVI/VGA signal input use)
⑪. RF signal input

I/O Port for EUR. System

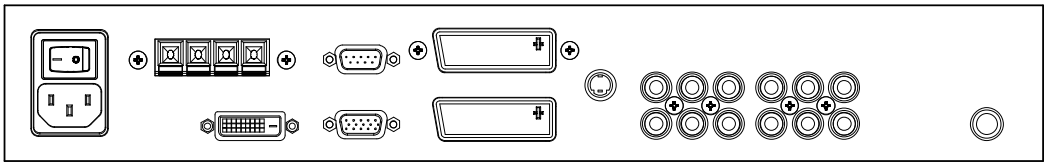

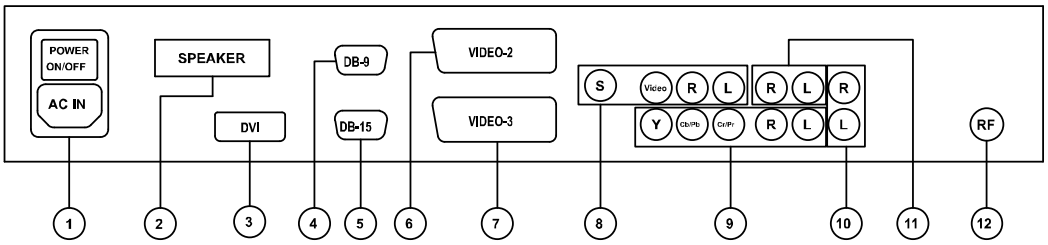

①. Main power switch & AC input socket
②. Speaker port
③. DVI input port
④. RS-232 connection port (option)
⑤. VGA input port
⑥. Scart input port
⑦. Scart input port
⑧. S-Video input port
⑨. YPbPr input port (for embedded multi-media player use)
⑩. Audio output port
⑪. PC audio input port (with DVI/VGA signal input use)
⑫. RF signal input

2. SYSTEM SETUP

Remote Control function

No	Key name	Description	Monitor Remote Control Unit
1	🔇	Turn off volume	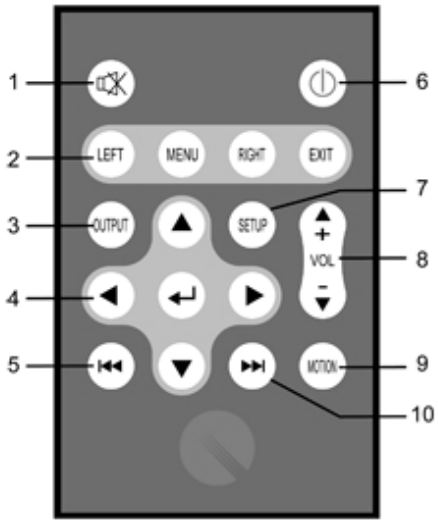
2	LEFT / MENU / RIGHT / EXIT	➢ Left/Menu/Right for AD board OSD use ➢ EXIT for AD board input source select	
3	Output	Change video out mode	
4	◄/▲/►/▼/ ↵	navigation key / Confirm function (For multi-media player OSD use.)	
5	⏮	Previous file	
6	⏻	Power standby on or off	
7	Setup	No function	
8	VOL + / -	➢ Adjust volume up / down ➢ When into AD board OSD mode for navigation key	
9	Motion	No function	
10	⏭	Next file	

3. ON SCREEN DISPLAY OPERATING INSTRUCTIONS

--- AD Board ---

- Press **MENU** button on the remote control or **OSD** button to display the main menu.
- Press VOL + ▲ or VOL-▼ to select item and press "LEFT" or "RIGHT" to enter the function sub items or into select a specific adjustment item.

Main Screen

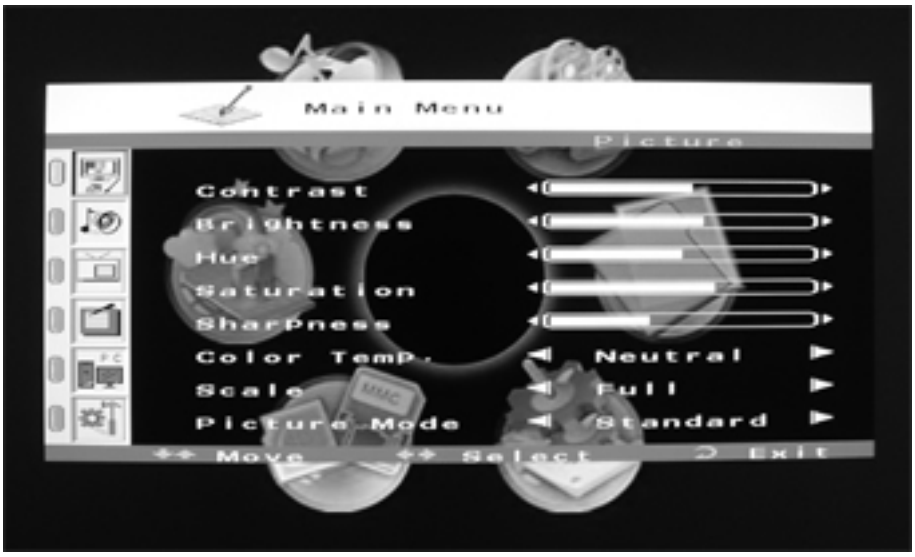

Setup Screen

Main Menu

Level 1	Level 2	Level 3/Function
Picture	Contrast	About picture correlation setup item.
Sound	Brightness	
TV-Channel	Hue	
Function	Saturation	
PC	Sharpness	
OSD	Color Temp.	
	Scale	
	Picture Mode	

Main Menu

Level 1	Level 2	Level 3/Function
Picture **Sound** TV-Channel Function PC OSD	Source Bass Treble Balance MTS Sound Mode Sound Effect	About sound correlation setup item.

Main Menu

Level 1	Level 2	Level 3/Function
Picture Sound **TV-Channel** Function PC OSD	TV Auto Trace Auto Scan Fine Tune Add/Erase Source Closed Caption Parent Control Favor Edit	About TV-Channel correlation setup item.

Main Menu

Level 1	Level 2	Level 3/Function
Picture Sound TV-Channel **Function** PC OSD	Sleep Timer PIP ON/OFF PIP ADJ. Color Control PC Auto Adjust 3D NR	About TV function correlation setup item.

Main Menu

Level 1	Level 2	Level 3/Function
Picture	Contrast	About PC correlation setup item.
Sound	Brightness	
TV-Channel	H-Pos.	
Function	V-Pos.	
PC	Clock	
OSD	Phase	
	Color Mode	
	Auto	

Main Menu

Level 1	Level 2	Level 3/Function
Picture	Language	About OSD correlation setup item.
Sound	H-Pos.	
TV-Channel	V-Pos.	
Function	Halftone	
PC	Information	
OSD	Reset	

--- Multi-Media Player ---

Main Screen

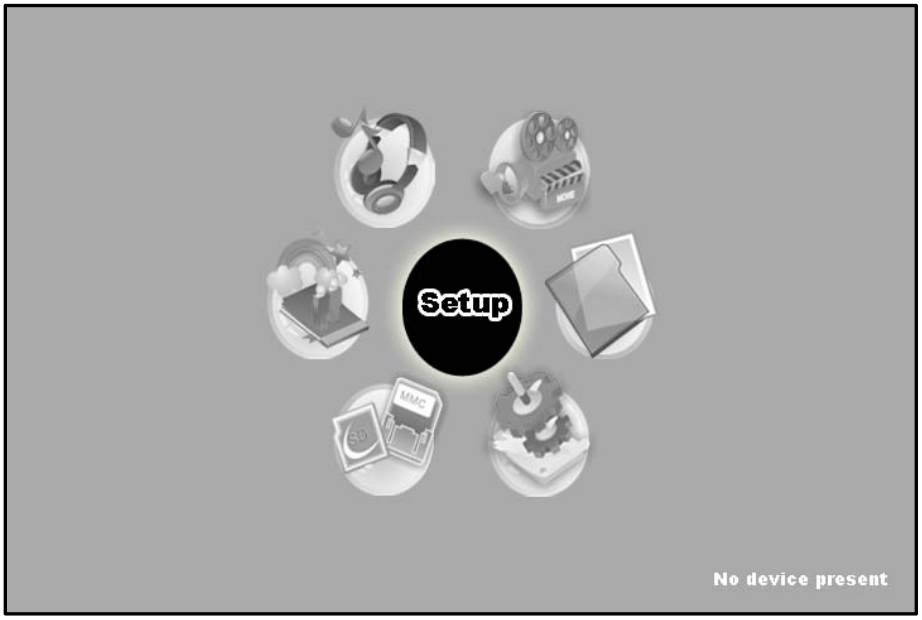

- ✧ Plug-in CF card and turns on power, 6 function icons will be displayed for selection.
- ✧ Click arrow key◄/▲/►/▼of remote control to select auto power-on play.
  Note: Pressing the arrow key◄/▲/►/▼during looping will interrupt the play mode. To retrieve the mode please turn off the power and reboot again.
- ✧ Use arrow key◄/▲/►/▼for the selection movement. Use enter key↵ to enter / confirm the selection.
  Note: When on CF card detected, you can only execute “Setup”. (All other functions will be disabled.)

Photo operate screen

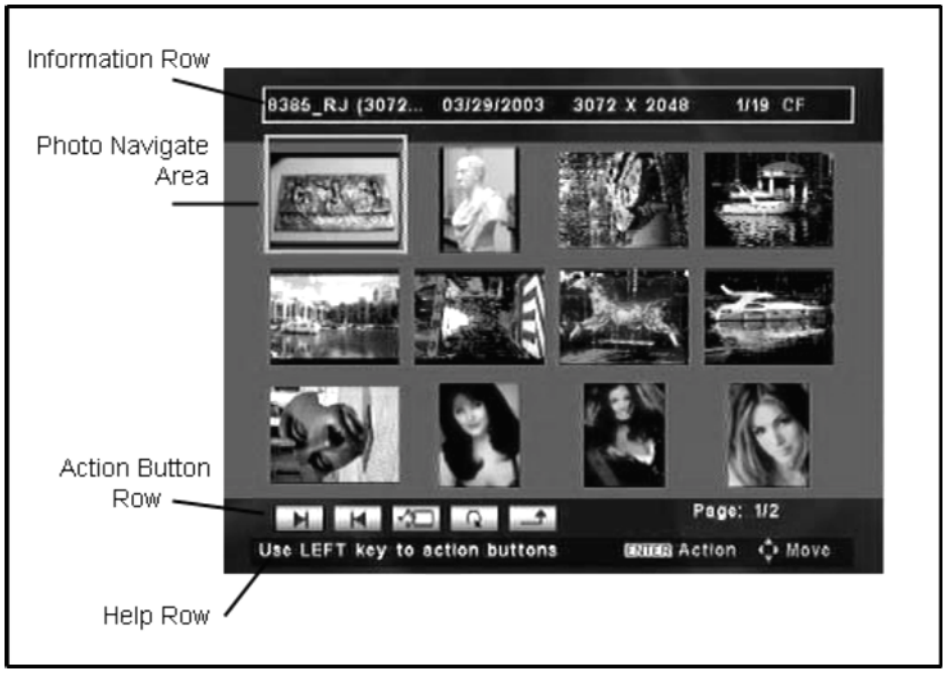

- ✧ Information Row and Help Row display subject to the setting of OSD.
- ✧ Please use arrow key◄/▲/►/▼as movement, Use enter key ↵ as confirmation.
- ✧ When cursor is at first menu photo, press arrow key ◄ will link to action button row。
- ✧ This screen will not be displayed if there is no photo file format in you CF card.

Music operate screen

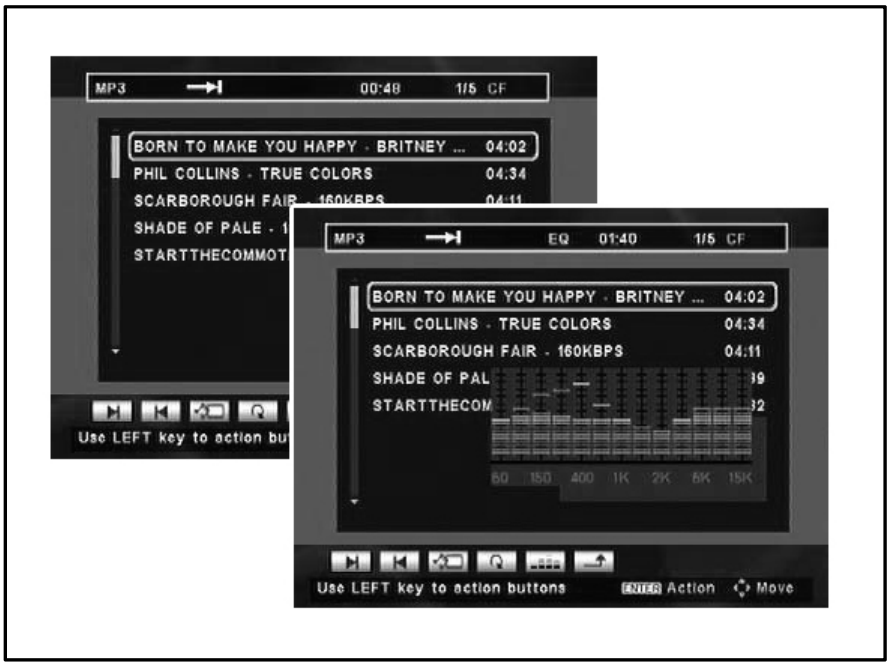

Video operate screen

File operate screen

Device operate screen

Non-active screen of user.

Setup screen

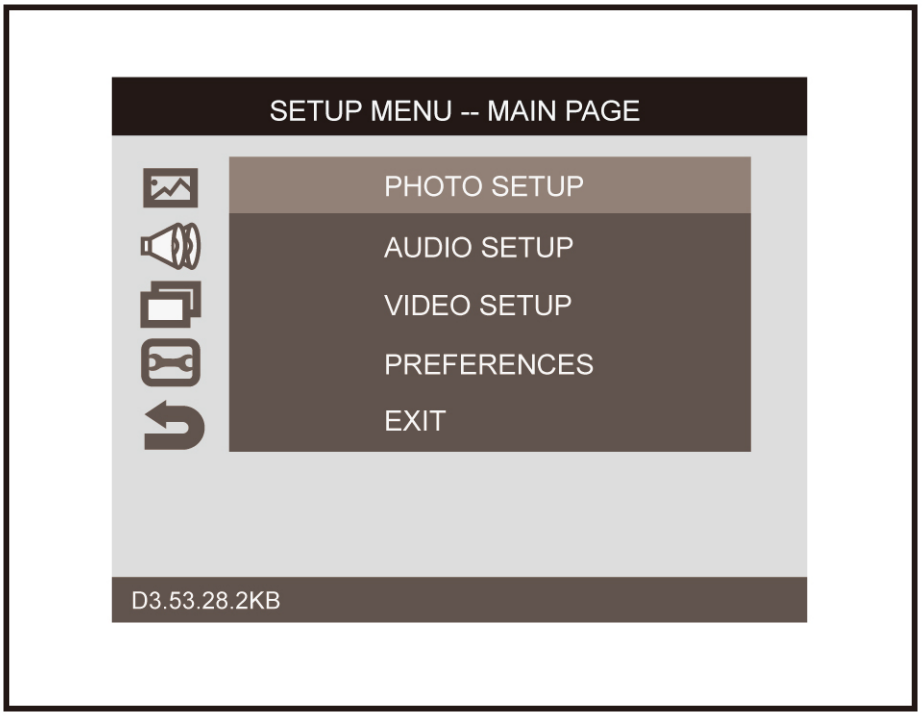

PHOTO SETUP – THUMBNAIL DIGEST

Level 1	Level 2	Level 3/Function
PHOTO SETUP	THUMBNAIL DIGEST	
AUDIO SETUP	PHOTO DISPLAY SIZE	ON / ZOOM /OFF
VIDEO SETUP	SLIDESHOW MODE	
PREFERENCES	INTERVAL TIME	Icon set up ◆ **ON**: Reduce the icon into smaller size ◆ **ZOOM**: Reduce in 4:3 proportions. ◆ **OFF**: Remain the icon size as it is.
EXIT	TRANSITION	
	MAIN PAGE	

Note: about the remote control key operate, is suitable for the following explanation.

1. Use ▲/▼/►/◄ for movement among selection.

2. Use ↵ as enter / confirmation.

PHOTO SETUP – PHOTO DISPLAY SIZE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	THUMBNAIL DIGEST	
AUDIO SETUP	**PHOTO DISPLAY SIZE**	BEST FIT / DEFAULT
VIDEO SETUP	SLIDESHOW MODE	
PREFERENCES	INTERVAL TIME	Photo setup
EXIT	TRANSITION	◆ **BEST FIT**: Regardless photo size and adjust to best fit of screen.
	MAIN PAGE	◆ **DEFAULT**: Display as original photo size.

PHOTO SETUP – SLIDESHOW MODE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	THUMBNAIL DIGEST	
AUDIO SETUP	PHOTO DISPLAY SIZE	MANUAL / AUTO
VIDEO SETUP	**SLIDESHOW MODE**	
PREFERENCES	INTERVAL TIME	How to activate slideshow
EXIT	TRANSITION	◆ **MANUAL**: Manually.
	MAIN PAGE	◆ **AUTO**: Auto on.

PHOTO SETUP – INTERVAL ITME

Level 1	Level 2	Level 3/Function
PHOTO SETUP	THUMBNAIL DIGEST	
AUDIO SETUP	PHOTO DISPLAY SIZE	1 / 3 / 5 / 10 SECONDS
VIDEO SETUP	SLIDESHOW MODE	
PREFERENCES	**INTERVAL TIME**	Default slideshow interval timing last.
EXIT	TRANSITION	
	MAIN PAGE	

PHOTO SETUP – TRANSITION

Level 1	Level 2	Level 3/Function
PHOTO SETUP	THUMBNAIL DIGEST	Full Screen / Top->Bottom /
AUDIO SETUP	PHOTO DISPLAY SIZE	Bottom->Top / …. / Implode /
VIDEO SETUP	SLIDESHOW MODE	Cross fade / Random
PREFERENCES	INTERVAL TIME	Determine the effect of change
EXIT	TRANSITION	page between slides.
	MAIN PAGE	

AUDIO SETUP – SPDIF OUTPUT

Level 1	Level 2	Level 3/Function
PHOTO SETUP	SPDIF OUTPUT	
AUDIO SETUP	MAIN PAGE	OFF / SPDIF/RAW / SPDIF/PCM
VIDEO SETUP		
PREFERENCES		Non-active screen of user.
EXIT		

VIDEO SETUP – VIDEO OUTPUT

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	TV MODE	YPbPr / RGB
VIDEO SETUP	VIDEO FULL SCREEN	
PREFERENCES	DIVX SUBTITLE	Video output set up
EXIT	SUBTITLE LANGUAGE	
	MAIN PAGE	

VIDEO SETUP – TV MODE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	**TV MODE**	WIDE TV / NORMAL TV
VIDEO SETUP	VIDEO FULL SCREEN	
PREFERENCES	DIVX SUBTITLE	Setting for TV mode.
EXIT	SUBTITLE LANGUAGE	
	MAIN PAGE	

VIDEO SETUP – VIDEO FULL SCREEN

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	TV MODE	WIDE (16:9) / NORMAL (4:3)
VIDEO SETUP	**VIDEO FULL SCREEN**	
PREFERENCES	DIVX SUBTITLE	Setting for aspect ratio.
EXIT	SUBTITLE LANGUAGE	
	MAIN PAGE	

VIDEO SETUP – DIVX SUBTITLE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	TV MODE	ON / OFF
VIDEO SETUP	VIDEO FULL SCREEN	
PREFERENCES	**DIVX SUBTITLE**	On/Off the subtitle of DIVX video format.
EXIT	SUBTITLE LANGUAGE	
	MAIN PAGE	

VIDEO SETUP – SUBTITLE LANGUAGE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	VIDEO OUTPUT	
AUDIO SETUP	TV MODE	ENGLISH / 中文
VIDEO SETUP	VIDEO FULL SCREEN	
PREFERENCES	DIVX SUBTITLE	Select language subtitle of DIVX video format.
EXIT	**SUBTITLE LANGUAGE**	
	MAIN PAGE	

PREFERENCES PAGE – OSD LANGUAGE

Level 1	Level 2	Level 3/Function
PHOTO SETUP	**OSD LANGUAGE**	
AUDIO SETUP	INFORMATION ROW	ENGLISH
VIDEO SETUP	HELP ROW	
PREFERENCES	FILE EDITING	Setting OSD Language
EXIT	FILE SORTING	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

PREFERENCES PAGE - INFORMATION ROW

Level 1	Level 2	Level 3/Function
PHOTO SETUP	OSD LANGUAGE	
AUDIO SETUP	**INFORMATION ROW**	ON / OFF
VIDEO SETUP	HELP ROW	
PREFERENCES	FILE EDITING	Display information or not in manual operate mode.
EXIT	FILE SORTING	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

PREFERENCES PAGE – HELP ROW

Level 1	Level 2	Level 3/Function
PHOTO SETUP	OSD LANGUAGE	
AUDIO SETUP	INFORMATION ROW	ON / OFF
VIDEO SETUP	**HELP ROW**	
PREFERENCES	FILE EDITING	Display help or not in manual operate mode.
EXIT	FILE SORTING	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

PREFERENCES PAGE – FILE EDITING

Level 1	Level 2	Level 3/Function
PHOTO SETUP	OSD LANGUAGE	
AUDIO SETUP	INFORMATION ROW	ON / OFF
VIDEO SETUP	HELP ROW	
PREFERENCES	**FILE EDITING**	Non-active screen for user.
EXIT	FILE SORTING	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

PREFERENCES PAGE – FILE SORTING

Level 1	Level 2	Level 3/Function
PHOTO SETUP	OSD LANGUAGE	
AUDIO SETUP	INFORMATION ROW	A TO Z / Z TO A / RECENT DATA / OLDEST DATE
VIDEO SETUP	HELP ROW	
PREFERENCES	FILE EDITING	Setting the play sequence preference.
EXIT	**FILE SORTING**	
	AUTO START	
	SETUP VALUES	
	MAIN PAGE	

PREFERENCES PAGE – AUTO START

Level 1	Level 2	Level 3/Function
PHOTO SETUP AUDIO SETUP VIDEO SETUP **PREFERENCES** EXIT	OSD LANGUAGE INFORMATION ROW HELP ROW FILE EDITING FILE SORTING **AUTO START** SETUP VALUES MAIN PAGE	OFF / PHOTO + MUSIC / PHOTO + VIDEO Auto start setting / power-on ◆ **OFF**: manual. ◆ **PHOTO + MUSIC**: Auto start Photo + Music. ◆ **PHOTO + VIDEO**: Auto start Photo + Video.

PREFERENCES PAGE – SETUP VALUES

Level 1	Level 2	Level 3/Function
PHOTO SETUP AUDIO SETUP VIDEO SETUP **PREFERENCES** EXIT	OSD LANGUAGE INFORMATION ROW HELP ROW FILE EDITING FILE SORTING AUTO START **SETUP VALUES** MAIN PAGE	DEFAULT Return to factory default set-up.